

# DATA SHEET

REF. AA02DA

## AIR FRESHENER DOUBLE AIR WITH AEROSOL



### GENERAL

**WARRANTY:** 2 years.  
**ACTUATION METHOD:** Digital programming.  
**EFFECTIVE IN SPACES BETWEEN:** 25 - 60m2  
**DISPENSING MODE:** Spray interval from 1 to 90 min.

### AMBIENCE

**TEMPERATURE RANGE:** 5/40°C  
**HUMIDITY RANGE:** 20-90%

### AIR FRESHENER DOUBLE AIR


**MOUNTING:** Screwed to the wall.  
**NET WEIGHT:** 637g  
**GROSS WEIGHT:** 746g  
**DIMENSIONS:** 8,8 x 14,5 x 25 cm / 3. 46 x 5. 71 x 9. 84 Inch.  
**MATERIAL:** ABS and Polypropylene.  
**COLOR:** White.  
**BATTERY TYPE / NUMBER:** Alkaline AA LR6 x 2 pcs.  
**VOLTAGE:** 1.5V x 2  
**INDICATOR:** 10uA when 200 mA is activated.

### REFILL

**FEATURES:** Rigid.  
**CAPACITY:** 250ml / 3.000 doses.  
**MATERIAL:** Metal.

### HOW TO USE

**Insertion of the battery:** Unlock the front cover to insert 2 alkaline batteries. The LCD screen will show the clock with the character ON.  
**Settings:** Press and hold the "MODE" button for 2 seconds to introduce the settings, then quickly press the "Mode" button to move to the next function. The device will exit the "Mode" setting if there is no action after 10 seconds.  
**Setting the spray mode:** The first step is to set the spray mode once it is entered into the MODE configuration. The LCD screen shows the letters "L R" in the left corner and the flash, the word "SPRAY" is shown in the right corner. Press the "+" button or the "SPRAY button" to configure it. L: Choose L, only left side spray / R: Choose R the right side spray only / L R: Both sides spray alternately.  
**Stop spraying:** Press the MODE button to set the spray stop time. The LCD screen shows the STOP character, press the "+" button or the "SPRAY" button to set the time. Press the MODE button again to set the minutes.  
**Spray start time and explanation of the end time:** 1. The start time of the spray is before the spray stop time, the machine will stop working the same day. It starts at: 09:00, and stops at: 21:00/2. The start time of the spray after the sprinkler stop times, the machine will stop the operation the next day. It starts at 2:00 p.m. and stops at 9:00 p.m/3. The spray start time is the same as the sprayer stop time, the machine will run all day. Start at: 09:00 and stop at: 09:00.  
**Spray interval time:** Press the MODE button to set the spray interval time. The LCD screen shows the character INTERVAL. The default setting is 15 min. You can choose the interval time from 1 min to 90 min. Press the "+" button or the "SPRAY button" to configure it.  
**Work day setting:** Press the MODE button to set the work day. The LCD shows the WEEK character. There are three settings that can be chosen: 1,2,3,4,5: The device operates from Monday to Friday. / 1,2,3,4,5,6: The device works from Monday to Saturday / 1,2,3,4,5,6, 7: The device works all week. Press the "+" button or the "SPRAY" button to configure it.  
**Clock setting:** Press the MODE button to set the time. The LCD screen shows the "CLOCK" character. Press the "+" button or the "SPRAY" button to set the time, press the "MODE" button to set the hours / minutes.  
**Date setting:** After configuring CLOCK, press the MODE button to set the current date. The LCD screen will display the WEEK character again, press "+" button or SPRAY to set the date. Press the POWER button to exit the MODE setting immediately after finishing all the previous setting. Press SPRAY to prevent it from being sprayed.

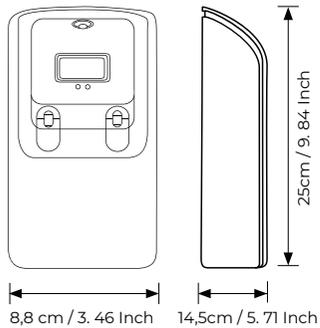


Register No.: AN-04-DM-01  
Version: 002  
Date: 21/10/2021

### AVAILABLE FRAGRANCES (250ml)


Amethyst, Equilibrium, Malaysia, Mango, Snow, Cloud, Petals, Sunrise, Lemon Air, Apple, Vanilla, Baby Powder, Coffee, Cinnamon Apple, Fresh, Fresh Grass, Love, New Baby, Lavender Vanilla, Bubble Gum, Star, Galaxy, Gelati, Green Tea, Tangerine, Mediterranean Beach, Oudh, Proflower, Just Washed, Victus, Violet, Citronella, Bamboo, Bahía, Peach, Natural Pyrethrin Insecticide.

### PRECAUTIONS

- Keep the air freshener away from damp places.
- Do not use in spaces where food is prepared or handled.
- Do not spray on plasticized, painted or varnished surfaces.
- Never leave old batteries inside the appliance.
- If the air freshener is not used for a long period of time, remove the batteries and the aerosol.
- The air freshener is not a toy. Keep it out of the reach of children.
- Always use new alkaline batteries and remove old ones.
- Do not use near the face.

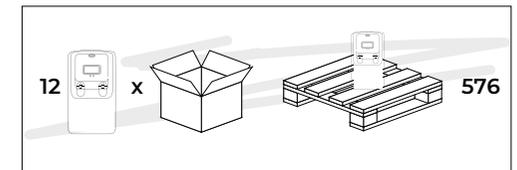

AIR FRESHENERS ON PALLETS

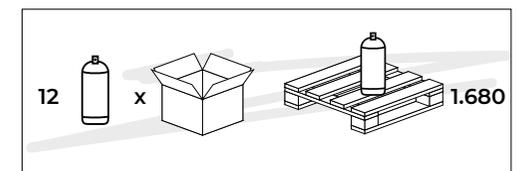

BOTTLES ON PALLETS