


# DATA SHEET

REF. AA02DA

## FRAGRANCE DISPENSER **DOUBLE AIR**

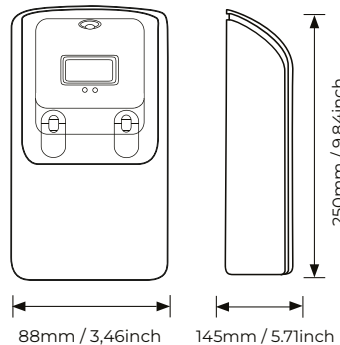

### GENERAL

**WARRANTY:** 2 years.  
**ACTUATION METHOD:** Digital programming.  
**EFFECTIVE IN SPACES BETWEEN:** 25-60m<sup>2</sup>.  
**DISPENSING MODE:** Spray interval from 1 to 90 minutes.

### AMBIENCE

**TEMPERATURE RANGE:** 5 / 40°C.  
**HUMIDITY RANGE:** 20-90%.

### FRAGRANCE DISPENSER DOUBLE AIR

**MOUNTING:** Screwed to the wall.  
**NET WEIGHT:** 637g.  
**GROSS WEIGHT:** 746g.  
**DIMENSIONS:** 88 x 145 x 250mm / 3,46 x 5,71 x 9,84inch.  
**MATERIAL:** ABS and Polypropylene.  
**COLOR:** White.  
**BATTERY TYPE / NUMBER:** Alkaline AA LR6 x 2 pcs.  
**VOLTAGE:** 1.5V x 2.  
**INDICATOR:** 10uA when 200mA is activated.  
**MARKETING:** Can be customized with logo / label.

### REFILL

**FEATURES:** Rigid.  
**CAPACITY:** 250ml / 3.000 doses.  
**MATERIAL:** Electrolytic tinplate with a thickness of 0.20mm.

### HOW TO USE

**Battery installation:** Unlock the front cover and insert the batteries. The LCD screen will display the clock. **Settings:** Press and hold the "MODE" button for 2 seconds to enter settings. Press the "MODE" button briefly to move to the next function. The device will exit "MODE" settings if there is no activity after 10 seconds. **Spray settings:** Enter MODE settings; the LCD screen displays the letters "L R" on the left side flashing, and the word "SPRAY" on the right side. Press the "+" button or the "SPRAY" button to adjust it. L: Select L for left-side spray only / R: Select R for right-side spray only / L R: Both sides spray alternately. **Time settings:** Press the "MODE" button to set the spray start time, press the "+" or "SPRAY" button to set the hour. Press the "MODE" button again to set the minutes. **Stop spray:** Press the "MODE" button to set the spray stop time. The screen shows the word STOP, press the "+" or "SPRAY" button to set the hour. Press the "MODE" button again to set the minutes. **Spray start and stop time explanation:** 1. If the spray start time is earlier than the stop time, the machine stops the same day. It starts at 09:00 and stops at 21:00. / 2. If the spray start time is later than the stop time, the machine stops the next day. It starts at 14:00 and stops at 09:00. / 3. If the spray start time is the same as the stop time, the machine will run all day. It starts at 09:00 and stops at 09:00. **Spray interval time:** Press the "MODE" button to set the spray interval time. The screen shows INTERVAL. The default setting is 15 minutes. You can choose an interval from 1 to 90 minutes. Press the "+" or "SPRAY" button to adjust it. **Workday setting:** Press the "MODE" button to set the working days. The LCD screen shows WEEK. There are three options: 1,2,3,4,5: the device works from Monday to Friday. / 1,2,3,4,5,6: the device works from Monday to Saturday. / 1,2,3,4,5,6,7: the device works all week. Press the "+" or "SPRAY" button to adjust it. **Clock setting:** Press the "MODE" button to set the time. The LCD shows CLOCK. Press the "+" or "SPRAY" button to set the hour, then press the "MODE" button to set the minutes. **Date setting:** After setting CLOCK, press the "MODE" button to set the date. The screen will show WEEK again, press the "+" or "SPRAY" button to set the date. Press the POWER button to exit "MODE" settings immediately after completing all the above adjustments. Press SPRAY.


Register No.: AN-04-DM-01  
Version: 002  
Date: 21 / 10 / 2021

### AVAILABLE FRAGRANCES (250ml)


Amethyst	Galaxy
Equilibrium	Gelati
Mango	Green Tea
Snow	Tangerine
Petals	Mediterranean Beach
Sunrise	Oudh
Lemon Air	Proflower
Apple	Just Washed
Vainilla	Victus
Cinnamon Apple	Violet
Fresh	Citronella
Fresh Grass	Bamboo
Love	Bahía,
New Baby	Peach
Lavender Vanilla	Natural Pyrethrin Insecticide

### PRECAUTIONS

- Keep the air freshener away from damp places.
- Do not use in spaces where food is prepared or handled.
- Do not spray on plasticized, painted or varnished surfaces.
- Never leave old batteries inside the appliance.
- If the air freshener is not used for a long period of time, remove the batteries and the aerosol.
- The air freshener is not a toy. Keep it out of the reach of children.
- Always use new alkaline batteries and remove old ones.
- Do not use near the face.

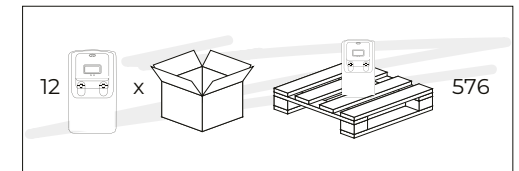

AIR FRESHENERS ON PALLETS

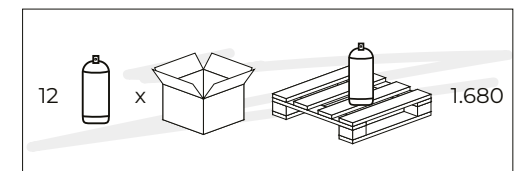

BOTTLES ON PALLETS