
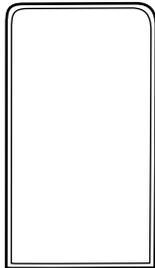


DATA SHEET

REF. HANDRY-W, HANDRY-C

HAND DRYER WITH SENSOR AND HIGH SPEED

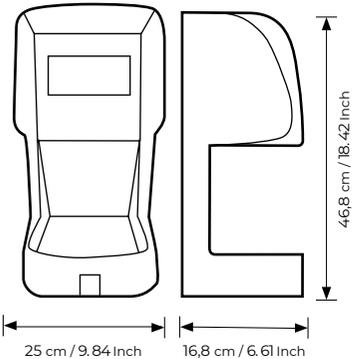

GENERAL

WARRANTY : 2 years.
LIFECYCLE OF MOTOR: 5 years (based on average usage: 200 time per day)
ACTUATION METHOD: It activates when detecting hands by an infrared led.
LENGTH OF WIRE: 1800mm

AMBIENCE

TEMPERATURE RANGE: 5/45°C
HUMIDITY RANGE: 20-90%

HAND DRYER HIGH SPEED

MOUNTING: Screw to the wall.
NET WEIGHT: 4,400kg
GROSS WEIGHT: 5,200kg
DIMENSIONS: 25 x 16,8 x 46,8cm / 9. 84 x 6. 61 x 18. 42 inch.
MATERIAL: ABS plastic and Polypropylene.
COLOR: White, Chrome.

ELECTRONICS

POWER SOURCE: 220 V - 50 Hz / 110 V
POWER: 1900 W
WORKING CURRENT: 4,54 A

PACKING ATTACHMENT

Chart	Function	Amount
	Iron bracket use for hanging the hand dryer	1
	Screws 3.8* 30mm to fix the iron bracket and 1 for the hand dryer	5
	Plugs 8* 35 mm	5
	User manual	1

HOW TO USE

Insert the plug into the socket. To dry hands, put your hands under the sensor, rub the hands and move your palm and back of your hands slowly. Warm/ cold-air system, depending on the ambient temperature:-22°C ambient temp.: warm air +22°C ambient temp.: cold air Move away your hands for stop the running. Note: After continuously working for 30 seconds, this hand dryer will pause automatically due to its built-in-self-protection function. If you remove your hand away from it and put back again, it will restart working.

DIALY USE & MAINTENANCE

HOW TO DISASSEMBLE AND CLEAN WATER COLLECTION BASE


Disassemble water collection base from main frame: press the fastener of main frame and pull the sink to your site then you can disassemble.

Pour away the water. Clean the water collection. Wash the dirt off by water. If there is much dirt, please use a soft rag to clean that. Put the water collection base into main frame and make sure it is tight.

CLEAN THE VENTILATION AND SILENCE SPONGE (ONE OR TWO TIMES A MONTH)

Please clean the ventilation net and silence sponge regularly, unplug the hand dryer before take off the ventilation net and silence sponge. Take off the ventilation net and silence sponge from the machine. Clean the ventilation net and silence sponge with vacuum cleaner. Do not clean the ventilation net and silence sponge with water or steel brush, after some time of use, the ventilation net and silence sponge will become brown, it does not affect its functions. Install the ventilation net and silence sponge back to the machine.

Note: Clean this machine with wet cloth (with slight detergent is recommended). Always keep the sensor cover clean. Please do not use any chemical diluents, detergents, benzene, sterilizing agent or steel brush to clean this machine.

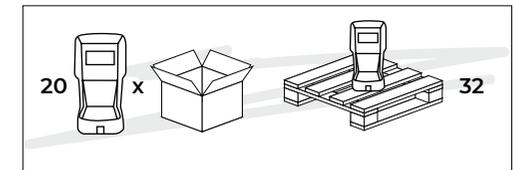

HAND DRYER ON PALLETS

Register No.: AN-04-DM-01
Version: 002
Date: 11/10/2021