

# DATA SHEET

REF. JE7

# AUTOMATIC SOAP DISPENSER



## GENERAL

**WARRANTY:** 2 years.  
**MODALITY:** Gel  
**ACTUATION METHOD:** Automatic sensor  
**DISPENSER MODE:** Sensor System

## AMBIENCE


**TEMPERATURE RANGE:** 5/40°C  
**HUMIDITY RANGE:** 20-90%

## AUTOMATIC DISPENSER

**MOUNTING:** Screw to the wall or with adhesive.  
**NET WEIGHT:** 740 gr  
**GROSS WEIGHT:** 825 gr  
**DIMENSIONS:** 120x105x260 mm  
**MATERIAL:** ABS y Polypropylene.  
**COLOR:** White  
**SAEFTY LOCK:** Integrated  
**BATTERY TYPE:** LR14 x 4 (Alkaline)  
**VOLTAGE:** DC 1,5V

## REFILL

**SUPPLY TYPE:** Plastic pouch.  
**CAPACITY:** 800ml  
**MATERIAL:** Polyurethane plastic.

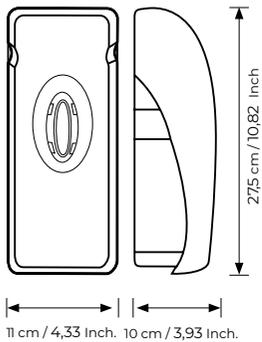

## HOW TO USE

1. Fix the soap dispenser to the chosen wall using screws or double-sided tape. 2. Open the proansoap dispenser by inserting the key in the slot located on one side and place the refill. 3. Place the mouth of the refill over the inner valve (with the mouthpiece tongue facing outward) and press down. 4. Insert the bottle by pushing the bottom of the valve inward with your finger until the actuator clicks.

## FEATURES

· It is marketed with the possibility of supplying the hydroalcoholic gel product in a bag. · Simple, easy to refill and clean (smooth surfaces). · Practical size: Model suitable for communities. · Easy installation: screwed or adhesive. · Valid for any surface (marble, glass, tile, etc.). · Equipped with a translucent window to guarantee the correct control of product consumption. · Reinforced with integrated closure. · Provided with an anti-drip valve that avoids product waste.


Register No.: AN-04-DM-01  
Version: 002  
Date: 06/10/2021

## AVAILABLE REFILLS (Pouch 800 ml)


**PRODERMO SOAP (800ml):**  
Hand soap foam or gel, dermo-protector.

**SPECIAL HAND SOAP (800ml):**  
Hand soap foam or gel, general use.

**HAND CLEANER (800ML):**  
Hand gel for high dermatological hygiene, capable of eliminating 99.9% of bacteria from the skin without the need to rinse with water or dry with a towel / paper.

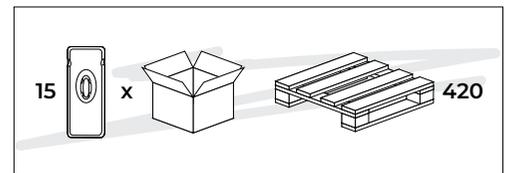

DISPENSER ON PALLETS

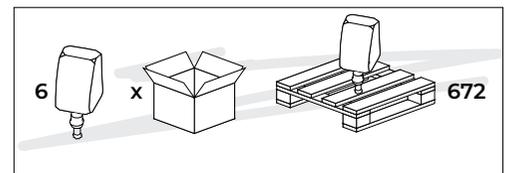

POUCH ON PALLETS